## DADTLICT

NO.	PART IMAGE	PART NAME	Q'TY
01	0 🖉	Straight Connector	18
02	<b>6</b>	3-Way Connector	2
03	o 🖏	T-Connector	20
04	o 🚕	4-Way Connector	17
05	<b>9</b> 💥	Cross Connector	18
06	e 🧏	5-Way Connector	6
07	<b>6</b> ¶	114 Degree Connector	14
08	<b>o</b> 🖔	156 Degree Connector	14
09		3.23" (82mm) Yellow Tubing	26
10	0	3.75" (95mm) Yellow Tubing	5
11		5.63" (143mm) Yellow Tubing	5
12	0	6.4" (162mm) Yellow Tubing	20
13	C	8.5" (216mm) Yellow Tubing	36
14	C:	10.7" (272mm) Yellow Tubing	5
15	0:	14.9" (378mm) Yellow Tubing	4
16 0		22.5" (572mm) Yellow Tubing	5
17		Release Pliers	1
18		Locking Castor Assembly	4
19		Red Jumbo Bin	4
20		Blue Jumbo Bin	4
21		Green Jumbo Bin	4



# INSTRUCTION MANUAL

### IMPORTANT:

#905-020GT

12

BIN

**NON-TIP MOBILE** 

STORAGE

# Read through these simple instructions before starting assembly.

- 1. KEEP UNUSED PARTS IN THE MARKED BAG UNTIL USED. Some parts are very similar and can be confused.
- 2. Assemble each section separately as shown in the exploded drawings.
- 3. If parts need to be loosened, use our "release pliers" to loosen the connection
- 4. After each section is complete, assemble the sections together into the final unit.

### **ASSEMBLY & DISASSEMBLY**


#### How to Assemble & Disassemble Tube and Connector

Note: Do not hold tube and connectors where you insert each piece as finger may be pinched.



(2) Finish the assembly of both connectors with the tube in between. Then insert the connectors into two separate tubes to complete a panel. (Fig. 3-1)

Do not assemble the tubes and connectors one by one. (Fig. 3-2)

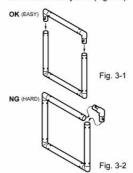

(1) Push corner connector into tube and turn the tube until a "click" is heard.



Fig. 2

(3) Put release pliers into holes that have safety lock pins coming through and squeeze the pliers to release the tube from the

