














**PART LIST**

NO.	PART IMAGE	PART NAME	Q'TY
01	<b>A</b> 	Corner Connector	4
02	<b>B</b> 	3-Way Connector	4
03	<b>C</b> 	T-Connector	10
04	<b>D</b> 	4-Way Connector	22
05	<b>E</b> 	Cross Connector	12
06	<b>F</b> 	5-Way Connector	12
07	<b>G</b> 	6-Way Connector	4
08		4.14" (105mm) Yellow Tubing	36
09		5.63" (143mm) Yellow Tubing	24
10		8.5" (216mm) Yellow Tubing	72
11		Release Pliers	1
12		Locking Castor Assembly	4
13		Non-Locking Castor Assembly	2
14		Red Jumbo Bin	6
15		Blue Jumbo Bin	6
16		Green Jumbo Bin	6
<b>TOTAL</b> .....			<b>225</b>



**INSTRUCTION MANUAL**

**IMPORTANT:**

**Read through these simple instructions before starting assembly.**

1. KEEP UNUSED PARTS IN THE MARKED BAG UNTIL USED.  
Some parts are very similar and can be confused.
2. Assemble each section separately - as shown in the exploded drawings.
3. If parts need to be loosened, use our "release pliers" to loosen the connection
4. After each section is complete, assemble the sections together into the final unit.

**ASSEMBLY & DISASSEMBLY**

**• How to Assemble & Disassemble Tube and Connector**

Note: Do not hold tube and connectors where you insert each piece as finger may be pinched.

(1) Push the connector into tube and turn the tube until a "click" is heard.

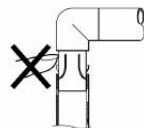


Fig. 1

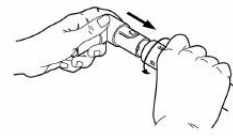


Fig. 2

(2) Finish the assembly of both connectors with the tube in between. Then insert the connectors into two separate tubes to complete a panel. (Fig. 3-1)

Do not assemble the tubes and connectors one by one. (Fig. 3-2)

(3) Put release pliers into holes that have safety lock pins coming through and squeeze the pliers to release the tube from the connector.

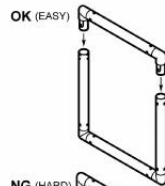


Fig. 3-1

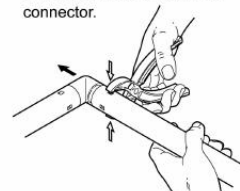


Fig. 4



Fig. 3-2

# ASSEMBLY ILLUSTRATION

#905-046 18 TILT BIN MOBILE STORAGE

